




1000 GALLON

UNDERGROUND PROPANE TANK INSTALLATION GUIDE

1. HOLE DIMENSIONS: **19'** LONG **4.5'** WIDE AND **4.5'** DEEP WITH **5"** BEDDED SAND
2. PLACE TANK IN HOLE. VERIFY PROPER DEPTH WITH **ORANGE STICKER** MARKED ON THE NECK OF TANK
3. PLACE ANODE BAG AT END OR SIDE WITH A MINIMUM DISTANCE OF **12"** FROM THE TANK
4. PLACE HOOD IN PROPER POSITION ON TANK AND BACKFILL THE ENTIRE TANK WITH SAND IMMEDIATELY
5. FINAL GRADE **MUST NOT** EXCEED THE **ORANGE LINE** ON TANK NECK



CALL FOR SAME DAY DELIVERY TO PREVENT FLOATING: 406-518-8388

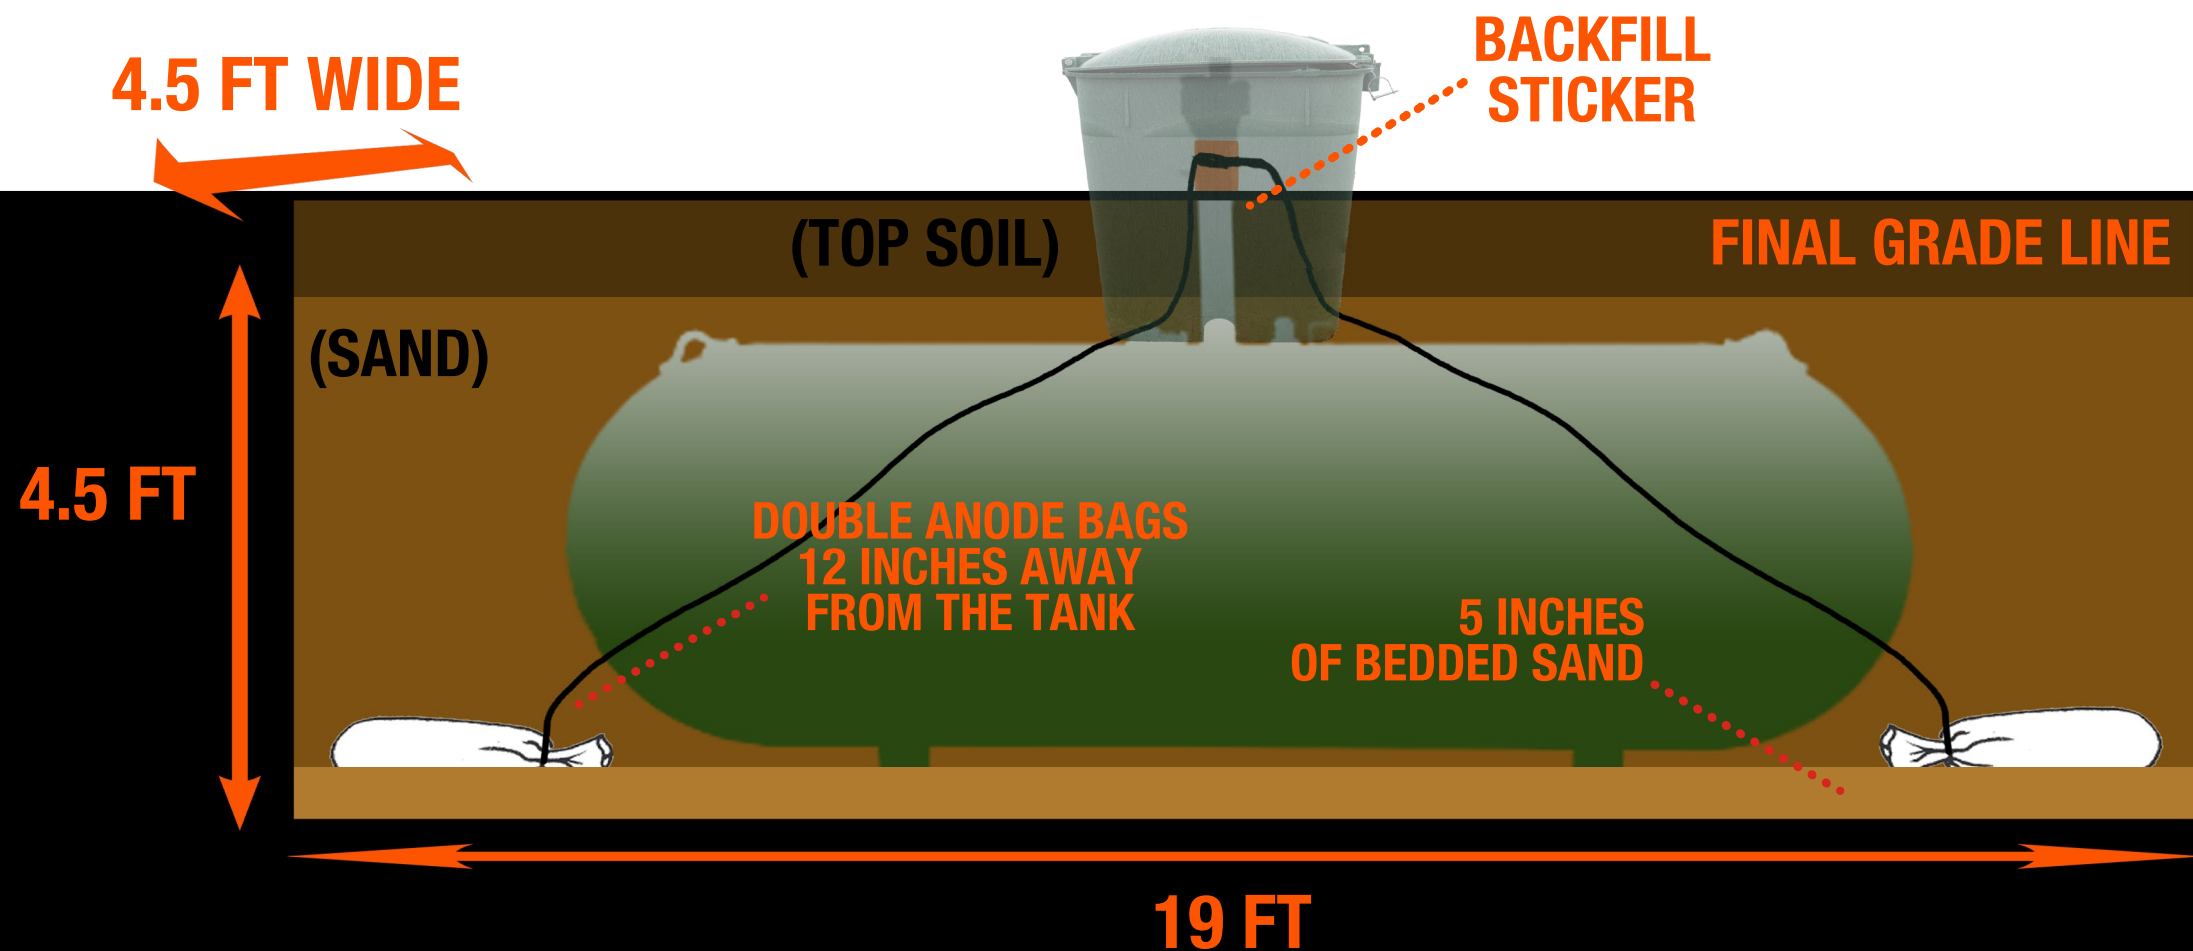

***MULTIPLE TANKS MUST
BE SPACED 3 FT APART**